


●VS-12PB (The following controllers do not have the I / O connectors: VS-12PB-M2PG, VS-12PB-M, VS-12PB-L)

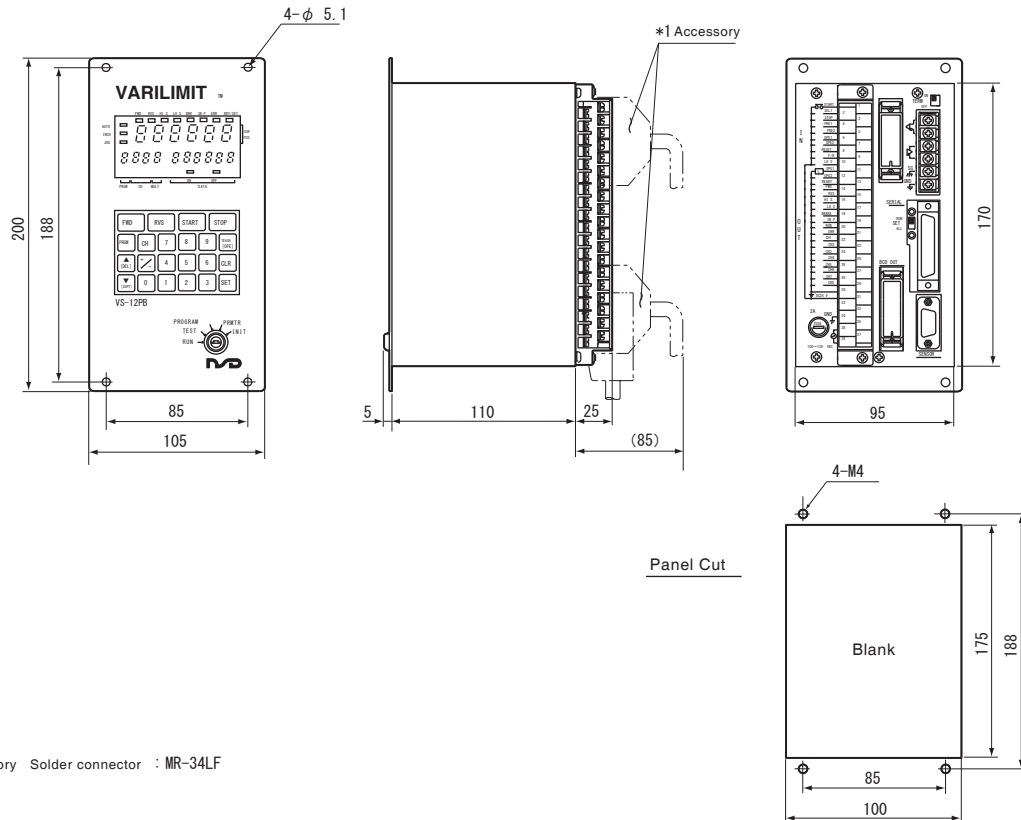

*1: Accessory Solder connector : MR-34LF