


Units: mm

●TMS-A10[ ]/A20[ ]/A50[ ]

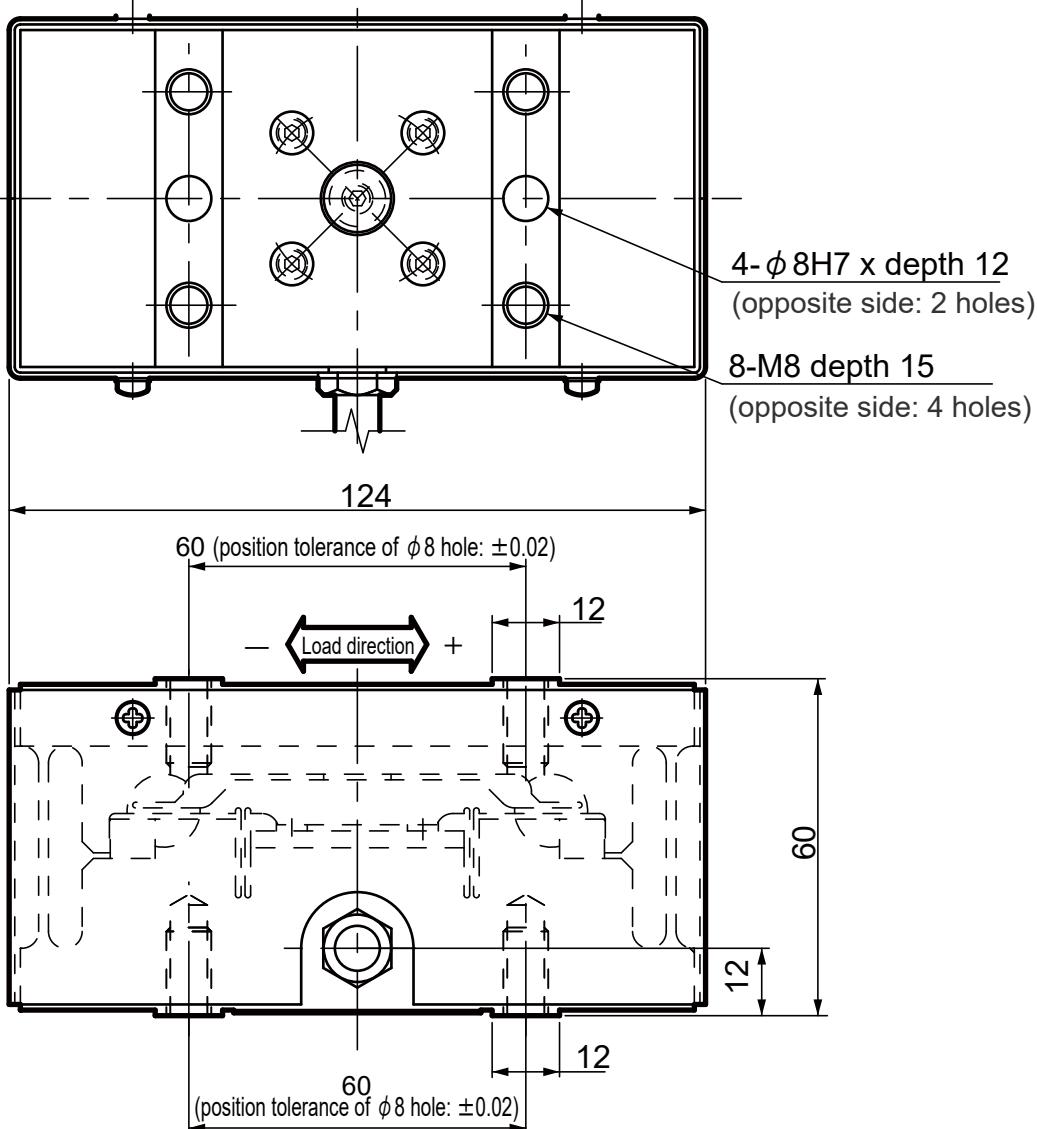

Note: In the factory setting mode, the amplifier output value will increase when the load is applied in the "+" direction of the double arrow sign.

